



VECTRON SYSTEMS

Leading in POS Technology



# Vectron POS Vario II

User manual



Your Vectron dealer

Stamp

Date: 31.01.2017

© 2017 by Vectron Systems AG

Subject to error and technical modification

Manufacturer  
Vectron Systems AG  
Willy-Brandt-Weg 41  
48155 Muenster, Germany  
[www.vectron.de](http://www.vectron.de)



# Contents

<b>1. Terms, signs and symbols .....</b>	<b>11</b>
1.1. Notes on safety.....	11
1.1.1. Signal words.....	12
1.1.2. Safety symbols .....	13
1.2. References to information .....	13
<b>2. General notes on safety .....</b>	<b>14</b>
<b>3. About this manual.....</b>	<b>16</b>
3.1. Target group .....	16
3.2. Purpose.....	16
3.3. Dealer support.....	16
3.4. Explanatory notes on content .....	17
<b>4. Specification .....</b>	<b>19</b>
4.1. Vario II POS system.....	19
4.2. Vectron POS software .....	22
4.3. Use as directed.....	22
4.4. Technical data.....	25
4.4.1. Vario II POS system.....	25
4.5. Power supply Vectron PS60 or PS61 .....	26
4.6. Vectron POS software .....	27
<b>5. Device description .....</b>	<b>28</b>
5.1. Shipment .....	28
5.2. Device description.....	28
5.2.1. Vario II front view.....	29
5.2.2. Vario II rear view .....	31
5.2.3. Vario II bottom view.....	33
5.2.4. Ports and connections detailed view.....	35
5.3. Power supply PS60 .....	37
5.4. Power supply PS61 .....	38
5.4.1. Power cord .....	39
5.5. Dimensions.....	41

<b>6. Starting</b> .....	<b>42</b>
6.1. Set up of Vario II .....	43
6.1.1. Selecting the setup site for Vario II.....	43
6.1.2. Connecting Vario II to the power supply.....	44
6.1.3. Connecting devices to Vario II.....	46
6.2. Placing the insert.....	47
6.3. Adjusting the display .....	48
6.4. Adjusting the customer display.....	49
<b>7. Operation</b> .....	<b>50</b>
7.1. Switching the Vario II on and off.....	50
7.1.1. Switching on the Vario II .....	50
7.1.2. Switching off the Vario II.....	51
7.2. Entering data to the Vario II .....	52
7.2.1. Entering data via the flat keyboard .....	53
7.2.2. Entering data via touch screen .....	54
7.3. Sign in to Vario II.....	56
7.3.1. Sign in via operator button.....	57
7.3.2. Sign in via operator key .....	58
7.4. Sign out from the Vario II.....	61
7.4.1. Sign out via operator button .....	61
7.4.2. Sign out via operator key.....	62
7.5. Working with guest checks .....	63
7.5.1. Opening a GC .....	64
7.5.2. Booking PLUs to a guest check .....	64
7.5.3. Closing a GC.....	64
7.5.4. Finalizing a GC .....	65
7.5.5. Splitting PLUs of a guest check to invoice .....	66
7.5.6. Splitting single PLUs of a guest check to another guest check.....	67
7.5.7. Moving all PLUs of one guest check to another guest check...	68
7.5.8. Transferring a guest check to another operator .....	68
7.6. Working with hold buffers.....	69
7.7. Working with reports .....	70
7.8. Void and Correction.....	71
7.9. Restarting Vario II.....	72

<b>8. Shut down .....</b>	<b>73</b>
<b>9. Errors, possible reasons and troubleshooting .....</b>	<b>76</b>
<b>10. Service and maintenance .....</b>	<b>80</b>
10.1. Cleaning.....	80
10.1.1. Cleaning housing and display .....	80
10.1.2. Cleaning the contacts.....	80
10.2. Maintenance.....	80
10.2.1. Exchanging the insert.....	81
10.3. Contacting the customer service.....	82
<b>11. Disposal .....</b>	<b>83</b>
<b>12. Glossary .....</b>	<b>84</b>
<b>13. Icons.....</b>	<b>86</b>
<b>14. EU Declaration of Conformity .....</b>	<b>95</b>
<b>15. Accessories .....</b>	<b>96</b>
15.1. Operator lock systems.....	96
15.1.1. Operator lock L10 MVII .....	96
15.1.2. Operator lock L21 MVII .....	97
15.1.3. Operator lock L30 MVII .....	97
15.2. Customer displays.....	98
15.2.1. Customer display Vectron C56.....	98
15.2.2. Customer display Vectron C75.....	99
15.2.3. Customer display Vectron C100.....	100
15.3. Extension cable Vectron PS60 .....	101
15.4. Stylus .....	101
15.4.1. Vectron stylus.....	101
15.4.2. Multifunction stylus .....	102

- 16. Other Vectron products .....103**
- 16.1. Stationary Vectron POS systems ..... 103
  - 16.1.1. Vectron POS Touch 15, POS Touch 15 PCT,  
POS Touch 15 II PCT ..... 104
  - 16.1.2. Vectron POS Touch 12, POS Touch 12 PCT,  
POS Touch 12 II PCT ..... 105
  - 16.1.3. Vectron POS Mini II ..... 106
- 16.2. Mobile Vectron POS systems ..... 107
  - 16.2.1. Vectron POS MobilePro III..... 107
- 16.3. Software ..... 108
  - 16.3.1. Vectron Mobile App..... 108
  - 16.3.2. Vectron Commander ..... 109
  - 16.3.3. Vectron Journal Tool ..... 110
  - 16.3.4. Vectron POS PC ..... 110
- 16.4. bonVito ..... 110





# 1. Terms, signs and symbols

This chapter informs you about the terms, signs and symbols that are used in this manual.

## 1.1. Notes on safety

This user manual contains safety notes, which indicate hazards when operating the Vectron POS Vario II, in the following referred to as Vario II.

Each safety note consists of three elements, the signal word (1), the word message (2) and the safety symbol (3).

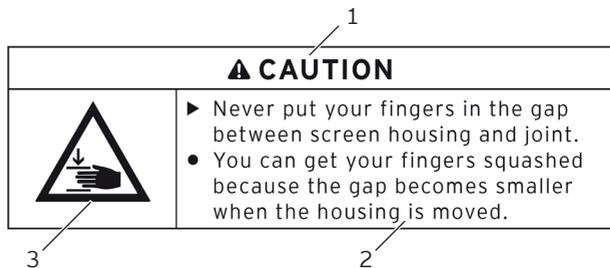


Fig. 1: Example for a safety note

The instructions following the safety note tell you how to behave in order to avoid the hazard.

**1.1.1. Signal words**

Signal words inform you about the risk of danger. The risk contains information on how serious injuries are and how probable it is that an injury will occur.

**⚠ DANGER**

The signal word “DANGER” indicates a danger with high risk, which will result in death or severe injury if it is not avoided.

**⚠ WARNING**

The signal word “WARNING” indicates a danger with medium risk, which could result in death or severe injury if it is not avoided.

**⚠ CAUTION**

The signal word “CAUTION” indicates a danger with low risk, which could result in minor injuries if it is not avoided.

**NOTICE**

The signal word “NOTICE” indicates a danger, which could result in material damage if it is not avoided.

### 1.1.2. Safety symbols

Each safety note contains a safety symbol, which marks the hazard graphically. If no special safety symbol is available, the general safety symbol is used.

Safety symbols have the following meaning:

Symbol	Meaning
	General safety symbols for signal word panels, warning of personal injuries.
	General safety symbol for hazards for which no special safety symbol is available.
	Special safety symbol for hazards through crushing.

### 1.2. References to information

This user manual contains information that refer to helpful information concerning the handling of Vario II.

The information signal has the following meaning:

	The information signal indicates references to information that can be helpful when operating the Vario II.
---	---

## 2. General notes on safety

This chapter informs you about general hazards that exist when operating the Vario II.

### **⚠ DANGER**

#### **Deadly shock caused by damaged POS system components.**

- ▶ Disconnect the mains cable from the power grid in case of damage.
- ▶ Contact your Vectron specialist retailer when POS system components are damaged.

### **⚠ CAUTION**

#### **Pinching of fingers when aligning the screen.**

The gap between the screen housing and the joint changes during alignment.

- ▶ Do not insert your fingers between the screen housing and the joint.
- ▶ Before aligning the screen see the notes in chapter 6.3 "Adjusting the display" on page 48.

#### **Danger of tripping and damaging device caused by device cables lying unprotected in the room.**

- ▶ Route the device cables so that they do not pose a potential hazard!

## NOTICE

### **Damage of POS system components caused by excessively high voltages or currents.**

- ▶ Use an earthed socket to which alternating current between 110 and 240 volts is connected.
- ▶ Use power sources which are protected with a residual-current circuit breaker.

### **Malfunctions caused by faulty programming.**

- ▶ Only change the programming when you are absolutely sure of the effects this will have.
- ▶ Protect the programming and programming functions with passwords.
- ▶ Your Vectron dealer will support you should you have questions on programming or will program the POS system according to your requirements.

### **Damage of touch screen through unsuitable objects.**

- ▶ Please touch the screen exclusively with fingers or the provided stylus.

### **Burn-in effect through static image content.**

Shadow images can remain visible on the display due to static image content.

- ▶ Please configure the screen saver.
- ▶ Your Vectron dealer will support you should you have questions on programming or will program the POS system according to your requirements.

### **Aggressive cleansers can damage the housing surface.**

- ▶ Do not use any scouring or dissolving agents for cleaning.
- ▶ If necessary clean the housing surface with a smooth, lint-free cloth. In case of strong contamination you can dampen the cloth with water or with a mild, residue-free cleanser.

### **Damage to POS system components when transporting in unsuitable packing.**

- ▶ Dispatch the POS system components exclusively in the original packing.

### 3. About this manual

This user manual is part of the Vario II. The user manual must be kept together with Vario II. When forwarding the Vario II please forward this manual as well.

#### 3.1. Target group

This user manual is meant for end users of the Vario II.

#### 3.2. Purpose

This user manual informs you about performance and features of the Vario II. It is meant to inform you about how to start, operate and close down the Vario II.

#### 3.3. Dealer support

Vectron Systems AG is the manufacturer of Vario II. Vectron does not sell the Vario II directly to end users. The Vectron specialist dealer from whom you purchased the Vario II is your contact partner for all questions concerning the POS system.

The Vario II POS systems which Vectron sells to their specialist dealers are neither programmed nor configured. Your Vectron dealer should have programmed and configured your Vario II POS system after consulting you and according to your requests.

For this reason, this user manual contains only the information that applies for all Vario II POS systems, since the Vectron POS software should be programmed and configured individually for you. This user manual does not contain information about programming and configuration of the Vario II POS system.

You should have obtained detailed training and documentation, adjusted to your programming and configuration of Vectron POS software, from your Vectron dealer.

### 3.4. Explanatory notes on content

The chapter “Specification” gives an overview on the tasks for which you can use the Vario II. In chapter “Device description” you are informed about the components of Vario II, where you find the components, their designation and the functions they have.

The chapter “Starting” explains the preparations required for starting the Vario II. The normal mode of the Vario II is explained in chapter “Operation”. The chapter “Shut down” describes how to shut down the Vario II if you do not use it for a longer period.

The chapter “Errors, possible reasons and troubleshooting” helps you to remove errors. The chapter “Service and maintenance” explains how to clean the Vario II and how to get technical support.

The chapter “Disposal” describes how to dispose of Vario II after use. The “Glossary” explains abbreviations and terms that are used in connection with Vario II. The chapter “Icons” explains the graphical elements of Vario II and their meaning.

## POS VARIO II

---

The “EU Declaration of Conformity” certifies the guidelines with which Vario II complies and according to which standards the Vario II was built.

The chapter “Accessories” informs you about additional products that you can buy and use together with Vario II. The chapter “Other Vectron products” informs you about other products, which Vectron offers in addition to Vario II.

## 4. Specification

This chapter informs you about the features, the technical data and the intended use of Vario II.

Vario II is a stationary POS system that consists of two components: the stationary POS system and the power supply Vectron PS60/PS61 with a power cord.

### 4.1. Vario II POS system

Vario II is a stationary POS system, which you can also use without network connection.

The two housing parts of Vario II consist of anthracite plastic with a chrome-plated metal frame. A metal hinge connects the two housing parts. The design of the upper housing parts prevents splash water and crumbs from penetrating.

The hinge between display- and keyboard housing allows tilting the display vertically in order to adjust it to your field of vision.

Via the touch screen you enter data like bookings with your finger or the touch pen. You can also enter data by pressing the keys of the flat keyboard.

A brightness sensor in the keyboard housing meters the illuminance and controls the display brightness.

An operator lock is mounted to the keyboard housing of Vario II. With the appropriate operator key you log in to Vario II. Your Vectron dealer should have configured the operator lock for you.

## POS VARIO II

---

The keyboard housing of Vario II has a compartment for Vectron specialist dealer information, to which your Vectron dealer should have inserted a card with contact information.

In a network you can configure the Vario II as client or as server. A client sends for example data to a server, which manages the POS systems network and processes the received data.

Your Vectron dealer can integrate the Vario II via network interface to a POS system network, so that the Vario II can receive data via the network and send data to other POS systems.

A loudspeaker is integrated to the display housing of Vario II. Vario II uses sounds to inform you about received messages, which were sent e.g. by a ServiceCall. Please ask your Vectron dealer to configure the sounds for you.

At the bottom of Vario II you find a bracket with ports. In addition to the internal loudspeaker you can connect stereo loudspeakers to the audio port.

The six USB- and six serial ports at the bottom serve for connecting external devices like e.g. printers, customer displays and scanners. At the left side of Vario II there are two more USB ports for connecting e.g. an USB stick or a USB keyboard.

Vario II provides two ports to which you can connect cash drawers. By means of a Y-cable you can connect up to four cash drawers.

Vario II has a cache and a flash memory. In case of power failure, the cache, where data is stored during operation of the Vario II, is supplied with power by means of a buffer battery. After switching off the Vario II data is stored in the flash memory.

An SD-card slot is inserted in the Vario II. It serves for reading and writing on SD-cards and SDHC-cards, e.g. for storing and restoring data. For this purpose you require an SD-card, which is not included in delivery.

Your Vectron dealer can mount a customer display to the customer display connection of Vario II, which shows texts and graphics. Please ask your Vectron dealer if you want him to mount and configure a customer display.

Your Vectron dealer should have configured and programmed the Vario II according to your requests.

### 4.2. Vectron POS software

Vario II is supplied with Vectron POS software, which your Vectron dealer configured and programmed.

All Vectron POS systems use the same software. The user interface can be adjusted individually to the different mobile and stationary POS systems.

The functions that can be used with the installed Vectron POS software depend on the applied software version, configuration and programming of the Vario II.

### 4.3. Use as directed

Vario II may be used as POS system. The power supply Vectron PS60/PS61 may be used for supplying the Vario II with power.

Use the supplied power cord with safety plug to connect Vario II and power supply Vectron PS60/PS61 to a grounded socket. Using other power supplies and power cords is not as directed. The power supply network must be protected with a fault current circuit breaker.

Vario II and power supply Vectron PS60/PS61 must not be opened. During normal operation of Vario II the port covers must not be removed from the ports. POS system and accessories must not be changed.

The operating company of Vario II is responsible for storage and backup of data created with the Vario II. The data is to be processed and stored in such a way that they comply with e.g. the demands of fiscal authorities.

Depending on configuration and programming of the Vectron POS software, operators can modify the stored data,

configuration and programming of the Vario II, for instance the PLU- or rights table for operators. Furthermore, operators can carry out functions like void if these are enabled in the rights management of the POS system.

You should protect yourself against undesired changes of the above mentioned parts of programming. This can be achieved by using operator keys, RFID cards and passwords.

Each operator should be assigned his required authorization in the rights table of the POS system. Operator keys and RFID cards, which enable these rights, must exclusively be accessible to the respective operators. The passwords must exclusively be known by the respective operators.

Operator rights must be assigned thoroughly, since operators - depending on their rights - can change or delete data, configuration and programming of Vario II. These changes can cause you financial damage or lead to penal consequences, for instance if the stored data does no longer comply with demands of the fiscal authorities.

The operating company is responsible for assigning the operator rights. Prior to starting, your Vectron dealer should draw up a concept for the assignment of operator rights together with you. Each operator of Vario II should exclusively be granted the rights he requires.

Your Vectron dealer is responsible for programming and configuration of the Vario II. Vectron advises you not to modify the programming and configuration yourself. Please contact your Vectron dealer for any questions and demands concerning programming and configuration.

Vario II and the power supply Vectron PS60/PS61 must be operated under ambient conditions as described in chapter 4.4 "Technical data" on page 25 . The Vario II must not

## POS VARIO II

---

be set up in the open. Operating the components out of these ambient conditions is not as directed.

The touch screen must exclusively be touched with touch pen or fingers.

Operation of Vario II is exclusively allowed with Vectron original accessories or accessories approved by Vectron. Your Vectron dealer will inform you about accessories that you can use together with the Vario II.

Keep the packaging material for dispatch purposes. Send the Vario II exclusively in its original packaging. Vectron Systems AG does not accept liability for damages due to improper packaging.

Use as directed also includes the reading and understanding of this user manual. In addition, the accidental regulations of the professional organizations have to be observed.

Any other use than the one described is not as directed. Vectron Systems AG does not accept liability for damages or injuries resulting from improper use.

## 4.4. Technical data

This chapter informs you about the technical data of Vario II.

### 4.4.1. Vario II POS system

Technical data of the Vario II POS system	
<b>Display diagonal</b>	30.75 cm (12.1")
<b>Display type</b>	TFT-LCD
<b>Display backlight</b>	LED backlight
<b>Display size</b>	24.6 x 18.45 cm; active
<b>Resolution</b>	800 x 600 pixel
<b>Colours</b>	Up to 256
<b>Input</b>	Touch screen; flat keyboard with 108 keys
<b>Housing</b>	Plastic anthracite and coated metal; the screen is infinitely adjustable
<b>Processor</b>	Marvell ARMADA 168, 1066 MHz
<b>Main memory</b>	512 MB DDR2-RAM
<b>Cache</b>	1 MB SRAM
<b>Mass memory</b>	4 GB Flash memory
<b>Network port</b>	10/100BASE-T, Ethernet
<b>USB ports</b>	8 x USB 2.0; type A; 2 of which at the left side
<b>Serial ports</b>	6 x RS232; type RJ45; for external devices
<b>Cash drawer ports</b>	2 x type RJ12; for up to four cash drawers with Y-cable
<b>Audio socket</b>	3.5 mm jack; stereo; for loud-speaker
<b>SD-card slot</b>	For SD-cards up to 4 GB and SDHC-cards up to 32 GB
<b>SIM card slot</b>	For standard Mini SIM cards (25 x 15mm) - as of device revision 1.03.

Technical data of the Vario II POS system	
<b>Power supply</b>	Through external power supply Vectron PS60 or Vectron PS61
<b>Buffer battery</b>	For permanent power supply of the cache
<b>Power consumption</b>	10 W in normal operation without external devices 0.4 W in standby
<b>Temperature</b>	Storage: -10 to 50 °C operation: 0 to 40 °C
<b>Dimensions (W x H x D)</b>	See drawing
<b>Weight</b>	Approx. 7.3 kg
<b>Certified</b>	CE

#### 4.5. Power supply Vectron PS60 or PS61

Technical data of power supply Vectron PS60 or Vectron PS61	
<b>Input voltage</b>	100 to 240 V alternating voltage
<b>Output voltage</b>	+ 24 V direct current
<b>Output current</b>	Max. 3.75 A
<b>Output power</b>	Max. 90 W
<b>Power consumption</b>	Max. 93 W
<b>No-load loss</b>	0.3 to 0.5 W
<b>Temperature</b>	Storage: -40 to 85 °C Operation: 0 to 40 °C
<b>Air humidity</b>	Operation: 5 to 95 %, non condensing
<b>Dimensions (W x H x D)</b>	145 x 60 x 32 mm
<b>Weight</b>	PS60: 450 g / PS61: 495 g
<b>Certified</b>	CE, UL 60950-1

#### 4.6. Vectron POS software

Technical data of Vectron POS software	
<b>PLUs</b>	1,000,000*
<b>Departments</b>	65,535*
<b>Operators</b>	2,000*
<b>Guest checks or customers</b>	65,535*
<b>Cash registers per network</b>	200*
<b>Printers per network</b>	100*
<b>bonVito</b>	Unrestricted support of the bonVito online marketing tool (liable to costs - more information and prices at <a href="http://www.bonvito.net">www.bonvito.net</a> )
<b>*</b>	The indicated values are maximum values, which can only be reached with special programming and optimum hardware equipment. The available functions also depend on the used software version and the programming of the POS system. Please contact your Vectron dealer to assist you with your special requirements.

# 5. Device description

Here you are informed about the components of the Vario II, where you find the components, their designation and their functions.

## 5.1. Shipment

Shipment of the Vario II POS system comprises the parts listed below. Please check the correct delivery on receipt.

- Vectron POS Vario II POS system
- Operator lock as per order
- Two covers for the SD-card- and SIM-card slot; one when the card is inserted, one for the empty casing
- Power supply Vectron PS60/PS61
- Power cord
- Four operator keys Vectron L10 or L20 for operator lock Vectron L10 or Vectron L20
- Vectron POS software with licence
- User manual
- Dispatch box

## 5.2. Device description

Here you are informed about the components of the Vario II, where you find the components and their designation.

### 5.2.1. Vario II front view



EN

Fig. 2: Vario II front view

Pos.	Designation
1	Touch screen
2	Compartment for Vectron dealer information
3	Brightness sensor
4	Keyboard film
5	108 keys
6	Keyboard bar
7	Operator lock

### **Touch screen pos. 1**

Via the touch screen you enter data to Vario II using a touch pen or your fingers.

### **Compartment for Vectron dealer information pos. 2**

Your Vectron dealer should have inserted a card with contact information to this compartment.

### **Brightness sensor pos. 3**

The brightness sensor meters the illuminance and controls the display brightness.

### **Keyboard film pos. 4**

Via the flat keyboard you enter data to the Vario II by pressing the keys. Underneath the keyboard film a sheet is inserted, which illustrates the functions.

### **Keys pos. 5**

The 108 keys are allocated to the functions that you can carry out by pressing them.

### **Keyboard bar pos. 6**

The keyboard bar serves for lifting the keyboard film.

### **Operator lock pos. 7**

By means of an operator key you log in to Vario II via the operator lock.

### 5.2.2. Vario II rear view



Fig. 3: Vario II rear view

Pos.	Designation
1	Customer display port cover
2	Hinge
3	Loudspeaker opening
4	Display housing rear
5	Display housing front

### **Customer display port cover pos. 1**

Behind this cover you find the port for a customer display, which you can purchase as accessory.

### **Hinge pos. 2**

The hinge connects display housing and keyboard housing. It serves for tilting the housing in order to adjust the display to your angle of view.

### **Loudspeaker opening pos. 3**

A loudspeaker is mounted behind this opening. Via this loudspeaker the Vario II can play system sounds for example.

### 5.2.3. Vario II bottom view

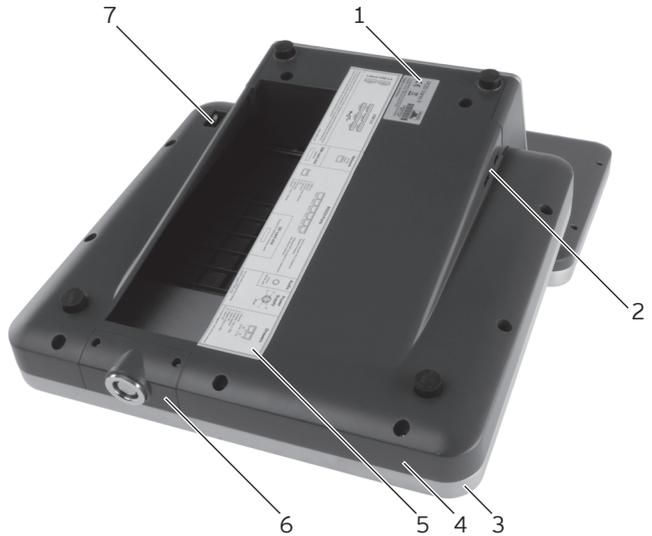


Fig. 4: Vario II bottom view

EN

Pos.	Designation
1	Serial number label
2	Two USB ports
3	Keyboard housing top
4	Keyboard housing bottom
5	Interface label
6	Insert for operator lock
7	On/Off switch

### **Serial number label pos. 1**

The serial number label serves for unambiguous identification of the Vario II. The label contains the product designation and the serial number of the Vario II.

### **USB ports pos. 2**

Via the USB ports you can connect external devices and storage media to the Vario II.

### **Interface label pos. 5**

The interface label informs you about the designation of interfaces and their functions.

### **Insert for operator lock pos. 6**

The operator lock is mounted to this insert. Your Vectron dealer can remove the insert from the keyboard housing. Your Vectron dealer can remove the operator lock from the insert and replace it by another operator lock.

### **On/Off switch pos. 7**

The On/Off switch serves for switching on and off the Vario II.

#### 5.2.4. Ports and connections detailed view

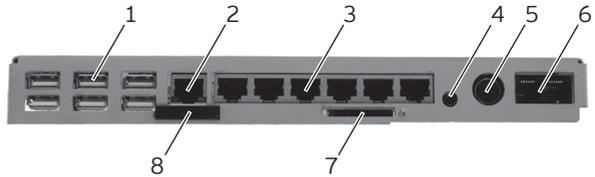


Fig. 5: Ports and connections detailed view

Pos.	Designation
1	Six USB ports
2	Network port
3	Six serial ports
4	Audio connection
5	Power connection
6	Two cash drawer ports
7	SD-card slot
8	SIM-card slot

### **USB ports pos. 1**

Via the USB ports you can connect external devices and storage media to the Vario II.

### **Network port pos. 2**

To the network port you can connect a network cable.

### **Serial ports pos. 3**

Via the serial ports you can connect external devices to Vario II.

### **Audio connection pos. 4**

To the audio port you can connect stereo loudspeakers, e.g. for playing system sounds.

### **Power connection pos. 5**

The power plug of the Vectron PS60/PS61 is connected to the power supply.

### **Cash drawer ports pos. 6**

To the cash drawer ports you can connect up to four cash drawers with a Y-cable.

### **SD-card slot pos. 7**

To the SD-card slot you can insert an SD- or SDHC-card, e.g. for storing data.

### **SIM-card slot pos. 8**

To the SIM-card slot you can insert a SIM-card, which for example encrypts data.

### 5.3. Power supply PS60



Fig. 6: Power supply PS60

EN

Pos.	Designation	Description
1	Power supply plug	The power supply plug is put into the power connector of the Vario II.
2	Panel connector	Panel connector for cable coupler.
3	Label	Product designation and serial number.
4	Power supply line	

### 5.4. Power supply PS61



Fig. 7: Power supply PS61

Pos.	Designation	Description
1	Power supply plug	The power supply plug is put into the power connector of the Vario II.
2	Panel connector	Panel connector for cable coupler.
3	Label	Product designation and serial number.
4	Power supply line	

### 5.4.1. Power cord



Fig. 8: German power cord



Fig. 9: English power cord



Fig. 10: American power cord

EN

Pos.	Designation
1	Female connector
2	Safety plug

## POS VARIO II

---

### **Female connector pos. 1**

The female connector is put into the mains plug of the power supply Vectron PS60/PS61.

### **Safety plug pos. 2**

The safety plug is put into a grounded socket, which is protected by a fault current circuit breaker. The safety plug may differ from the one shown in the figure.

## 5.5. Dimensions

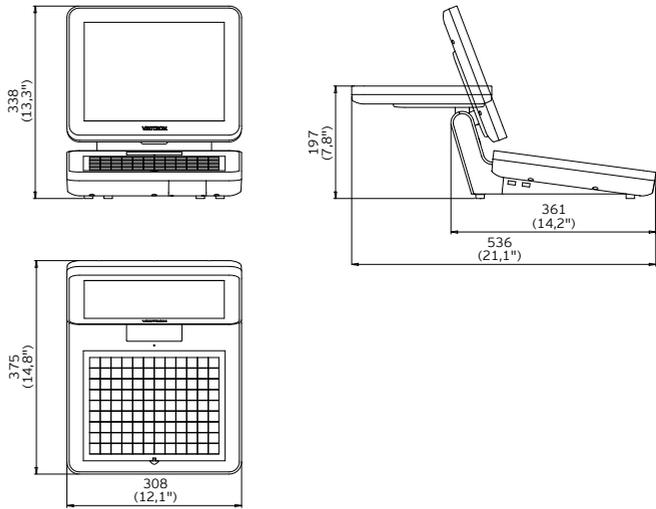


Fig. 11: Vario II (dimensions in millimetres and inch)

# 6. Starting

This chapter tells you how to start the Vario II.

Your Vectron dealer should have programmed and configured the Vario II POS system for your prior to starting. He should support you with the starting.

Prior to starting your Vectron dealer should train you with the operation of Vario II. Furthermore he should inform you about the functions of the Vario II POS system and adjust them to your demands.

Useful and important functions are for instance:

- configuring acoustic and optical signals
- entering PLUs to PLU tables
- configuring the graphical user interface
- configuring user passwords
- configuring reports
- configuring data backup
- saving energy
- operating the Vario II POS system
- using the Vario II POS system in wireless networks
- integrating and using the Vario II POS system in a network
- connecting external devices to the Vario II

## 6.1. Set up of Vario II

This chapter tells you how to set up Vario II, how to connect it to the power supply and how to connect devices to Vario II.

### 6.1.1. Selecting the setup site for Vario II

This chapter informs you about the setup site for Vario II.

<b>NOTICE</b>	
	<ul style="list-style-type: none"> <li>▶ Never set up the power supply and the POS system other than described in the instructions.</li> <li>• You can damage power supply and POS system if for instance the setup site is not stable.</li> </ul>

- Set up the Vario II in a well-ventilated room with a temperature between 0 and 40 °C.
- Do not cover the Vario II.
- Select the setup site so that the Vario II is not exposed to direct sunlight.
- Place the Vario II on a stable, even surface with sufficient space.
- Never place the Vario II next to e.g. sinks or dispensing systems to avoid that liquids are poured over the Vario II, power supply Vectron PS60/PS61 and power cord.
- Lay out the cables so that they are not under tension.
- Lay out the cables so that you do not trip over them.



- Place the Vario II to a site as described in chapter 6.1.1 “Selecting the setup site for Vario II” on page 43 .
- Put the female connector of the power cord into the mains plug of the power supply.



Fig. 13: Putting the female connector to the mains plug

EN

- Put the safety plug of the supplied power cord into a grounded socket with alternating voltage between 110 and 240, which is protected by a fault current circuit breaker.

### 6.1.3. Connecting devices to Vario II

This chapter tells you how to connect devices to the Vario II.

- Make sure to connect only Vectron-approved devices to Vario II.



Your Vectron dealer will tell you which devices may be connected to the Vario II.

- Make sure to lay out the cables so that they are not under pressure.
- Make sure to lay out the cables so that you do not trip over them.

## 6.2. Placing the insert

This chapter tells you how to place the insert underneath the keyboard film.



Your Vectron dealer should have provided you with suitable inserts that match the user interface of Vario II.

- Lift the keyboard film using the keyboard bar.
- Insert the sheet and align it to the quadrats printed on the keyboard film.



Fig. 14: Lifting the keyboard film and aligning the insert

### 6.3. Adjusting the display

This chapter tells you how to adjust the display of Vario II.

<b>⚠ CAUTION</b>	
	<ul style="list-style-type: none"><li>▶ Never put your fingers into the gap between display housing and hinge.</li><li>● You can crush your fingers since the gap becomes smaller when the display housing is moved.</li></ul>

- Hold the keyboard housing of Vario II with one hand and the display housing with the other.
- Adjust the display to your field of vision by tilting the housing.



Fig. 15: Adjusting the display

## 6.4. Adjusting the customer display

This chapter tells you how to adjust the customer display.

- Hold the display housing of Vario II with one hand and the housing of the customer display with the other.
- Adjust the customer display by tilting the housing to your field of vision.

## 7. Operation

This chapter tells you how to use the Vario II in normal mode.

### 7.1. Switching the Vario II on and off

This chapter tells you how to switch on and off the Vario II.

#### 7.1.1. Switching on the Vario II

If the Vario II was started as described in chapter 6 “Starting” on page 42 , you can switch it on.

- Shortly press the On/Off key to switch on the Vario II.



Fig. 16: Switching on the Vario II

### 7.1.2. Switching off the Vario II

This chapter tells you how to switch off the Vario II.

- Shortly press the On/Off key to switch off the Vario II.



Fig. 17: Switching off the Vario II

### **7.2. Entering data to the Vario II**

This chapter tells you how to enter data to the Vario II via touch screen and flat keyboard. You are also informed about the display elements.

Your display layout may differ from the one shown in this manual, depending on programming and configuration of your Vario II. Explanations in this user manual refer to the Vectron hospitality user interface with version 1.0.1.

Prerequisite for entering data to the Vario II is that Vario II was started as described in chapter 6 “Starting” on page 42 . You also have to switch on the Vario II as described in chapter 7.1.1 “Switching on the Vario II” on page 50.

### 7.2.1. Entering data via the flat keyboard

This chapter tells you how to enter data to the Vario II via flat keyboard.

- Touch the keys of the keyboard film with your fingers.



EN

Fig. 18: Entering data via flat keyboard

### 7.2.2. Entering data via touch screen

This chapter tells you how to enter data to the Vario II via touch screen.

- Touch the buttons of the touch screen with a touch pen or your fingers.



Fig. 19: Entering data via touch screen

Pos.	Designation
1	Status display
2	PLU selection
3	Open GC display
4	Input field
5	Info field
6	Balance display
7	Receipt-, invoice- and guest check display

### **Status display pos. 1**

Displays for example the date, time and the currently logged in operator.

### **PLU selection pos. 2**

Here you select the PLUs that are stored in PLU programming of the Vario II and are shown on the user interface.

### **Open GC display pos. 3**

Shows the currently open guest checks and the total sales of customers for the single GCs.

### **Input field pos. 4**

Displays for example the entries you make on the numeric pad. Furthermore, the price of the last booked PLU is displayed.

### **Info field pos. 5**

Displays for example media-related information, e.g. whether the customer paid cash or by credit card, or the change that a customer gets.

### **Balance display pos. 6**

The balance display shows in field "Receipt" the sum of current receipt bookings. The field "Sales" shows the sum of all PLUs booked to a guest check.

### **Receipt-, invoice- and GC display pos. 7**

Displays for example the entered PLUs, the invoice for a customer and the bookings for an open GC.

## 7.3. Sign in to Vario II

This chapter informs you about the sign in procedure and tells you how to sign in to Vario II.



Buttons that are mentioned in this chapter and that can be displayed as graphical elements, are shown in chapter 13 “Icons” on page 86 .

Depending on the programming of your Vario II you have to sign in to the POS system. Only then you can enter PLUs for example.

The Vectron POS software stores the entries and assigns them to the respective operator. You can assign access rights for every operator, which determine the functions for which he is authorized.

There are different ways for sign in to Vario II. If you have an operator key that you want to use for sign in please continue reading in chapter 7.3.2 “Sign in via operator key” on page 58 . If you do not have an operator key, please continue in chapter 7.3.1 “Sign in via operator button” on page 57 .

The POS system may be programmed in that way that you can use both methods for sign in.

### 7.3.1. Sign in via operator button

Carry out the following steps if your Vario II was programmed for sign in via operator button.

- Press the <Functions> key on the keyboard film.
- Press the button <Mod. functions 2> on the touch screen.
- Enter the operator number to the numeric pad of the keyboard film.
- Press the <Operator> button on the touch screen to sign in this operator.



The profile of the selected operator can be protected with a secret code. For sign in you have to enter the secret code.

- Enter the secret code to the numeric pad of the keyboard film if it is requested.
- For confirmation press the <Enter> key on the keyboard film to sign in this operator.

### 7.3.2. Sign in via operator key

This chapter informs you about an operator lock system, how it works and what you have to consider when using the operator lock system.

Your Vario II is delivered with an operator lock system. It consists of two elements: the operator lock, referred to as lock in the following, and the operator key, referred to as key in the following.

The lock is mounted to your Vario II. Your Vectron dealer should have handed over the ordered keys on delivery.

For Vario II you can order three operator lock systems, one of which is mounted to your Vario II. Standard is the operator lock Vectron L10.

Designation	Lock	Key
Lock and key Vectron L10		
Lock and key Vectron L20		
Lock Vectron L30 and key Addimat		

Each operator has assigned rights in the POS system. This means that you are for example allowed to void PLUs and to open the guest checks of other operators. The rights are stored in tables. These tables will be called rights tables in the following. Your rights, too, are stored in rights tables.

Your key has an unambiguous number. This number is stored in the rights table. This assignment helps Vectron POS software recognize who signs in to the POS system.

If you approach the key to the lock, the number is transferred from the key to the POS system. The rights that are stored for you in the rights table are enabled. You can work with the POS system.

Carry out the following steps if your Vario II was programmed for sign in via operator key.

- Approach the key to the operator lock.



Fig. 20: Approaching the key to the operator lock



The profile of the selected operator can be protected with a secret code. For sign in you have to enter the secret code.

- Enter the secret code to the numeric pad of the keyboard film if it is requested.
- For confirmation press the <Enter> key on the keyboard film to sign in this operator.

## 7.4. Sign out from the Vario II

This chapter tells you how to sign out from the Vario II.



Buttons that are mentioned in this chapter and that can be displayed as graphical elements, are shown in chapter 13 "Icons" on page 86 .



You should sign out from the Vario II if you do not use the POS system in order to avoid entries being made by others.

### 7.4.1. Sign out via operator button

Carry out the following steps if your Vario II was programmed for sign out via operator button.

- Press the <Functions> key on the keyboard film.
- Press the button <Mod. functions 2> on the touch screen.
- Press the <Operator> button on the touch screen to sign out this operator.

## 7.4.2. Sign out via operator key

Carry out the following step if your Vario II was programmed for sign out via operator key.

- Approach the Vectron L10 key to the lock if the Vectron L10 lock is mounted to the Vario II.
- Remove the L20 key if the Vectron L20 lock is mounted to the Vario II.
- Remove the Addimat key if the Vectron L30 lock is mounted to the Vario II.



Fig. 21: Approaching and removing the key

## 7.5. Working with guest checks

This chapter informs you about the guest check (GC) function. Whether or not you can use this function depends on programming and configuration of your Vario II.

The GC function serves for separate storage of bookings for several customers. It is useful for instance in hospitality, to store food and drinks separately for each table in a restaurant.

Your Vectron dealer can program and configure the number of GCs and operators according to your requests.



Buttons that are mentioned in this chapter and that can be displayed as graphical elements, are shown in chapter 13 "Icons" on page 86 .

### 7.5.1. Opening a GC

In order to store GC bookings you first have to open a GC. GCs, for which an invoice was not yet generated, can be opened again with this function.

- Enter the GC number to the numeric pad of the keyboard film to open the GC.
- Press the <GC> button on the keyboard film.



A GC that was already open can be opened again by pressing the GC button in the Open GC display.

### 7.5.2. Booking PLUs to a guest check

This chapter tells you how to enter PLUs, which the customers ordered, to a GC.

- Open the GC to which you want to book the PLUs as described in chapter 7.5.1 "Opening a GC" on page 64 .
- Press the keys on the keyboard film or the buttons on the touch screen on which PLUs are stored.

### 7.5.3. Closing a GC

When you close a GC, bookings for this GC are stored. There are several ways to close a GC.

- Press the <GC> button on the keyboard film or open a new GC as described in chapter 7.5.1 "Opening a GC" on page 64 , to close the currently open GC.

### 7.5.4. Finalizing a GC

With this function you generate an invoice, move the bookings to the booking memory and close the GC.

- Open the GC to be finalized as described in chapter 7.5.1 “Opening a GC” on page 64 .
- Enter the amount you got from the customer to the numeric pad.
- Press the <Cash> key or select another media to generate an invoice.



The POS system moves the bookings to the booking memory, closes the GC and displays the amount that you have to return to the customer.



After opening the GC you can directly press <Cash> or select another media. This is useful when you get the exact amount from the customer.

### 7.5.5. Splitting PLUs of a guest check to invoice

The GC split function serves for generating separate invoices for one GC. This is useful if guests of one table want to pay separately.



The GC split function can only be carried out if all PLUs of a GC have been booked. Close the open GC as described in chapter 7.5.3 "Closing a GC" on page 64 .

- Open the GC to be split as described in chapter 7.5.1 "Opening a GC" on page 64 .
- Press the <Payment> key on the keyboard film to display the payment surface.
- Press the <GC split> button on the touch screen.
- Select the PLUs to be split.
- Press the <Cash> button or select another media to generate an invoice for the split PLUs.

### 7.5.6. Splitting single PLUs of a guest check to another guest check

The GC split function serves for transferring single PLUs to another guest check. This is useful if some guests want to change the table.



The GC split function can only be carried out if all PLUs of a GC have been booked. Close the open GC as described in chapter 7.5.3 "Closing a GC" on page 64 .

- Open the GC to be split as described in chapter 7.5.1 "Opening a GC" on page 64 .
- Press the <Payment> key on the keyboard film to display the payment surface.
- Enter the GC no. to which the PLUs are to be transferred.
- Press the <GC split> button on the touch screen.
- Select the PLUs to be split.
- Press the <GC> button on the keyboard film to split the selected PLUs.

### **7.5.7. Moving all PLUs of one guest check to another guest check**

The move GC function serves for moving all PLUs of one GC to another.

- Open the GC to be moved as described in chapter 7.5.1 "Opening a GC" on page 64 .
- Press the <Payment> key on the keyboard film to display the payment surface.
- Enter the GC no. to which all PLUs are to be moved.
- Press the <GC move> button on the touch screen to move the guest check.

### **7.5.8. Transferring a guest check to another operator**

The transfer GC function serves for transferring a guest check to another operator. This function is useful for a shift change for example.

- Open the GC to be transferred as described in chapter 7.5.1 "Opening a GC" on page 64 .
- Press the <Functions> key on the keyboard film.
- Press the <Mod. functions 2> key on the touch screen.
- Press the <Shift change> button on the touch screen.
- Select an operator from the list to transfer the GC to him.

## 7.6. Working with hold buffers

This chapter informs you about the hold buffer function. Whether or not you can use this function depends on programming and configuration of your Vario II.

The hold buffer function serves for separate storage of bookings made by several operators. This function is useful for example in a bakery, if only one POS system is available for several users. Another scenario would be the supermarket, where a customer forgot his purse in the car. The already booked PLUs are stored in a hold buffer so that other customers can be served until the first returns with his money.

Hold buffers allow several operators simultaneously to work at one POS system. The first operator opens a hold buffer by pressing the respective button. He then signs in and enters the PLUs. The operator has not yet finalized the booking. If now a second operator wants to use the POS system, he presses another hold buffer button, signs in and enters the PLUs. Both operators can change between these hold buffers. The operators' entries remain in the respective hold buffer until payment.

Your Vectron dealer can program and configure the number of hold buffers and operators according to your requests.

### 7.7. Working with reports

This chapter informs you about the report function. Whether or not you can use this function depends on programming and configuration of your Vario II.

In reports you can evaluate data that was stored in the POS system. The Vectron POS software provides several standard reports. You can display and print PLU- and operator reports for example. A PLU report can contain e.g. PLU numbers, PLU names, the number of sold PLUs, the sales per PLU and the total sales. An operator report can contain e.g. the proceeds of the operators and the sales per customer.

You can create two types of reports with Vectron POS software: X-reports and Z-reports. X-reports are intermediate reports, where the data is not deleted from the booking memory. Z-reports are final reports, where the data is deleted from the booking memory.

Your Vectron dealer can program and configure reports according to your requests.

## 7.8. Void and Correction

This chapter informs you about the void function. Whether or not you can use this function depends on programming and configuration of your Vario II.

You can cancel bookings if for instance an operator made false entries. Furthermore, you can program and configure the Vario II so that PLUs are cancelled and the respective invoice is corrected, if a customer returns items.

## 7.9. Restarting Vario II

Restart the Vario II by switching it off and on again.

- Shortly press the On/Off key to switch off the Vario II.
- Shortly press the On/Off key to switch on the Vario II.



Fig. 22: Switching on and off Vario II

## 8. Shut down

This chapter tells you how to shut down the Vario II.

Shut down the Vario II if you do not use it for a longer period.

- Shortly press the On/Off key to switch off the Vario II.



Fig. 23: Switching off the Vario II

- Unplug the safety plug of the power cord from the socket.

## POS VARIO II

---

- Place the Vario II on a smooth, stable and even surface with sufficient space.
- Remove the safety plug of the power cord from the power connection of Vario II.



Fig. 24: Unplugging the power plug

- Unplug all cables that are connected to the Vario II.

- Unplug the female connector of the power cord from the mains plug of the power pack.



Fig. 25: Unplugging the female connector

- Pack the Vario II, power supply Vectron PS60/PS61 and power cord in the original packaging.
- Store the Vario II in a room where the temperature is between -10 and 50 °C.

## 9. Errors, possible reasons and troubleshooting

This chapter informs you about possible reasons for errors that occur when operating the Vario II and tells you how to remove them yourself. Please contact your Vectron dealer if you cannot solve the problem yourself.

Errors	Possible reasons	Troubleshooting
Vario II cannot be switched on.	The safety plug is not put into a live socket.	Put the safety plug of the supplied power cord into a grounded socket with alternating voltage between 110 and 240 volt and which is protected with a fault current circuit breaker.
	The power cable plug of the power supply PS30 is not put to the power connector of Vario II.	Put the power cable plug of the power supply PS30 to the power connector of Vario II.
	The On/Off key is damaged.	Contact your Vectron dealer.
	The power supply Vectron PS60/PS61 is damaged.	Contact your Vectron dealer.
	The Vario II is damaged.	Contact your Vectron dealer.

Errors	Possible reasons	Troubleshooting
The Vario II POS system does not react to your entries.	The signed-in operator is not authorized for the respective function.	Contact your Vectron dealer.
	The touch screen is not calibrated.	Contact your Vectron dealer.
	Vectron POS software has a malfunction.	Restart the Vario II as described in chapter 7.1 "Switching the Vario II on and off" on page 50 .
	Programming and configuration of Vario II is faulty.	Contact your Vectron dealer.
	The touch screen is damaged.	Contact your Vectron dealer.
	The flat keyboard is damaged.	Contact your Vectron dealer.
Vario II does not display anything.	Vario II is switched off.	Press the On/Off key as described in chapter 7.1.1 "Switching on the Vario II" on page 50 .
	The screen saver is active.	Touch the screen with a finger or the touch pen or press a key on the keyboard film.

## POS VARIO II

---

Errors	Possible reasons	Troubleshooting
	Vectron POS software has a malfunction.	Contact your Vectron dealer.
	The PS30 is damaged.	Contact your Vectron dealer.
	Vario II is damaged.	Contact your Vectron dealer.
The Vario II processes other entries than those made on the touch screen.	The touch screen is not calibrated.	Contact your Vectron dealer.
The Vario II processes other entries than those made on the touch screen.	Vectron POS software has a malfunction.	Restart the Vario II as described in chapter 7.1 "Switching the Vario II on and off" on page 50 .
	Programming and configuration of Vario II are faulty.	Contact your Vectron dealer.
	The touch screen is damaged.	Contact your Vectron dealer.
The sound reproduction at the Vario II does not work.	Loudspeakers are connected but the volume is too low.	Remove the loudspeakers or increase their volume.
	The sound reproduction was not programmed and configured.	Contact your Vectron dealer.

Errors	Possible reasons	Troubleshooting
	Loudspeakers are damaged.	Exchange the loudspeakers.
	The audio connection is damaged.	Contact your Vectron dealer.
Sign in by key via the operator lock to the Vario II is not possible.	The operator lock was not programmed and configured.	Contact your Vectron dealer.
	Operator lock or operator key are damaged.	Contact your Vectron dealer.

# 10. Service and maintenance

This chapter tells you how to clean the Vario II and informs you how to get technical support.

## 10.1. Cleaning

This chapter tells you how to clean the Vario II.

<b>NOTICE</b>	
	<p><b>Caustic cleansers can damage the surfaces</b></p> <ul style="list-style-type: none"><li>▶ Do not use caustic cleansers</li><li>▶ Only use mild cleansers or water for cleaning</li></ul>

### 10.1.1. Cleaning housing and display

Clean the housing of Vario II and the display with a fluff-free cloth. You can dampen the cloth with a mild, residue-free cleanser or water.

### 10.1.2. Cleaning the contacts

Clean the contacts of Vario II with a cotton bud and without applying pressure.

## 10.2. Maintenance

Any maintenance work at the Vario II must exclusively be carried out by your Vectron dealer.

### 10.2.1. Exchanging the insert

This chapter tells you how to exchange the insert of Vario II.



You get new inserts from your Vectron-dealer.

- Lift the keyboard film by means of the keyboard bar.
- Remove the insert.
- Insert the sheet and align it to the quadrats printed on the keyboard film.



Fig. 26: Lifting the keyboard film and aligning the insert

### **10.3. Contacting the customer service**

Please contact your Vectron dealer in case of questions or should you require assistance for operating the Vario II.

# 11. Disposal

Directive 2012/19/EU (WEEE)



Waste electric and electronic equipment must not be disposed of together with domestic waste.

Vectron Systems AG takes back waste electric and electronic equipment that has been used for commercial purposes and that was produced by or on behalf of the company. The company disposes of the waste electric and electronic equipment properly.

The legal take-back obligation applies for devices that were put on the market after 13 August 2005. In addition, Vectron Systems AG extends this obligation to all devices that have been put on the market as of 1 January 2004.

Please send back waste electric and electronic equipment that was produced by or on behalf of as well as their accessories in the original packaging, marked "Waste electric and electronic equipment" franco domicile to Vectron Systems AG.

**WEEE-Reg.-Nr. DE 91733199**

## 12. Glossary

This chapter explains the terms that are used in context with the Vario II.

Term	Definition
Bar code	Information, which consists of bars with varying widths and spaces of parallel lines. The bar code represents data, which e.g. the POS system can decode.
Booking memory	Memory in which every booking of the operators is stored.
Button	A button is programmed in the POS system and releases commands. The programmed commands can be called via touch screen or keyboard of the POS system.
Flash memory	Memory that keeps data even after the voltage supply was switched off.
Flat keyboard	Input device, which releases functions in the POS system when an operator presses the keys on the plastic film of the POS system.
GC server	POS system, which is responsible for central guest check administration in the network.
Icon	Pictograph used in graphical user interfaces. When touching or clicking on icons you can call functions of the Vectron POS software.
LCD	Liquid Crystal Display
Payment	Method for finalizing an invoice. Media are for example cash and credit card payment.
Payment interface	Displayed screen, on which you can effect payments with various media for example.
POS	Point Of Sale
Registration interface	Displayed screen, on which you can book PLUs to guest checks for example.
Thin Film Transistor (TFT)	Electronic component for control of screens.

---

Term	Definition
Touch screen	Input device which releases functions in the POS system, when an operator touches the buttons on the display.
User interface	All display elements and buttons on the screen, which serve for display of information or execution of functions.
X-report	Intermediate report, where data is not deleted from the memory.
Z-report	Final report, where data is deleted from the memory.

## 13. Icons

Icons are pictographs on the display of the Vario II. Icons shown on the display are designated buttons. A touch of the display button calls functions, like e.g. generating an invoice.

This chapter lists some of the icons integrated in Vectron POS software and explains their meaning. You can load self-created icons to Vectron POS software, e.g. for product groups or products.

Please contact your Vectron dealer for questions and requests concerning programming and configuration.

Overview of icons that are integrated in Vectron POS software:

The numbering of lines and columns is meant to help you with the designation of icons in this table. The icon no. of each icon that is used in Vectron POS software can be found in the detailed table starting page 88.

	1	2	3	4	5	6	7	8	9
1									
2									
3									
4						ESC	PRX Z		
5						MNG			PLU
6									
7									
8									
9		123- 789 456		DPT	WG				
10									
11									

EN

# POS VARIO II

---

Meaning of icons that are integrated in Vectron POS software:

Icon no.	Icon	Meaning
1		Vectron POS
2		Centered
3		Left assigned
4		Right assigned
5		Enter
6		Field up
7		Field down
8		Cursor left
9		Cursor right
10		Page up
11		Page down
12		Field left
13		Field right
14		Shift

Icon no.	Icon	Meaning
15		Shift lock
16		Editor
17		New record
18		Delete records
19		Print
20		Next record
21		Prev. record
22		Goto record
23		Select
24		Mark
25		Mark
26		Browser / Mask
27		Search by text
28		Send
29		Load

## POS VARIO II

---

Icon no.	Icon	Meaning
30		Store
31		Network
32		Clear
33		Esc
34		Mode
101		Takeaway
102		Cancel receipt
103		Duplicate receipt
104		Guest counter
105		In-house
106		No invoice
107		Operator
108		Manager func. Only
109		Open GC/operator
110		Seat number

Icon no.	Icon	Meaning
111	PLU	PLU
112		Invoice
113		Load invoice
114		Recall invoice
115		Duplicate GC
116		Split by seat no.
117		Void
118		Void last entry
119		Check
120		GC 0
121		GC split
122		Transfer GC
123		Check move
124		Table map
125		Edit GC text

EN

## POS VARIO II

---

Icon no.	Icon	Meaning
126		X reports
127		Z reports
128		Subtotal GC
129		Subtotal
130		Deposit
131		Paid out
132		Operator report
133		Receipt on
134		Receipt off
135		Data entry
136		Print format shift
137		Received amount
138		VIP sale
139		Journal
140		Price

Icon no.	Icon	Meaning
141		Table reservations
142	DPT	Department DPT
143	WG	Department WG
201		Cash
202		Media no.
401		Cold drinks
402		Hot drinks
403		Side dishes
404		Beer
405		Icecream
406		Fish
407		Meat
408		Beverages
409		Main dishes
410		Desserts

## POS VARIO II

---

Icon no.	Icon	Meaning
411		Pizza
412		Spirits
413		Starters
414		Wine
415		Vegetables
416		Salad

# 14. EU Declaration of Conformity

Manufacturer                      Vectron Systems AG  
     Willy-Brandt-Weg 41  
     D-48155 Münster  
  
 Device type                         Stationary POS system  
 Type designation                 **Vectron POS Vario II**

The manufacturer declares that the above designated product consistent with directive 2001/95/EC complies with the fundamental standards on electrical and electronic products as stipulated in the directives of the European Council. The below mentioned standards that were harmonised under the relevant directives were applied:

Directive	Standards
2014/30/EC Directive on electromagnetic compatibility	EN 55022 Kl. B:2010; EN 55024:2010, EN 61000-3-2:2014; EN 61000-3-3:2013
2014/35/EC Low Voltage Directive	EN 60950-1:2006+A11:2009+A12:2011+A1:2010+A2:2013
2011/65/EU Restriction of the use of certain hazardous substances (RoHS)	EN 50581:2012

EN

This declaration is made in authority for the manufacturer resident in the European Union.

Münster, 2016-10-10



Jens Reckendorf  
Member of the Board



Thomas Stümmler  
Member of the Board

## 15. Accessories

At this point we would like to inform you about the accessories you can purchase for the Vario II. For more information and the technical data for accessories please see the website at [www.vectron-systems.com](http://www.vectron-systems.com).

For questions concerning our products please contact your Vectron dealer.

### 15.1. Operator lock systems

The operator lock system serves for sign in to the Vario II. Various operator lock systems can be mounted to the Vario II.

#### 15.1.1. Operator lock L10 MVII



Abb. 1: Operator lock L10 MVII

### 15.1.2. Operator lock L21 MVII



Abb. 2: Operator lock L21 MVII

### 15.1.3. Operator lock L30 MVII



Abb. 3: Operator lock L30 MVII

### 15.2. Customer displays

On Vectron customer displays you can show texts and graphics, e.g. to inform your customers about special offers.

#### 15.2.1. Customer display Vectron C56

The customer display Vectron C56 is mounted to the screen housing of the POS system or to a stand. The Vectron C56 has a screen diagonal of 13.16 cm (5.2"), for display of 2 x 20 characters. On the customer display you can show texts and graphics. The Vectron C56 has a resolution of 240 x 64 pixels.



Fig. 27: Customer display Vectron C56

### 15.2.2. Customer display Vectron C75

The customer display Vectron C75 is mounted to the screen housing of the POS system or to a stand.

The customer display Vectron C75 has a screen diagonal of 17.78 cm (7").

On the customer display you can show texts and graphics.

The Vectron C75 has a resolution of 800 x 480 pixels.



Fig. 28: Customer display Vectron C75

### 15.2.3. Customer display Vectron C100

The 10.4" customer display Vectron C100 is suitable for display of sales information, logos and advertising images. The images can also be shown as slide show. Furthermore, event-related campaigns/texts can be released on the display.

The Vectron C100 can be connected directly to the stationary POS systems Vectron POS Mini II, Vectron POS Vario II, Vectron POS Touch 12 and Vectron POS Touch15.

The customer display is alternatively available as pole variant, which is also compatible to Vectron POS SteelTouch II. For optimum alignment to the client's position, the tilt angle of the high-resolution graphical display with LED backlight is fully adjustable.



Fig. 29: Customer display Vectron C100

### 15.3. Extension cable Vectron PS60

Extends the cable of the power supply Vectron PS60.



Fig. 30: Extension cable Vectron PS60

### 15.4. Stylus

The stylus serves for entering data via the touchscreen of Vario II.

EN

#### 15.4.1. Vectron stylus

The Vectron stylus serves for entering data via the touchscreen of POS Vario II. The Vectron stylus is made from plastic.



Fig. 31: Vectron stylus

### 15.4.2. Multifunction stylus

The multifunction stylus serves for entering data via the touchscreen of POS Vario II.

The multifunction stylus has an integrated ball pen refill. You can switch between write- and touch function by turning the casing.



Fig. 32: Multifunction stylus

## 16. Other Vectron products

Here we would like to inform you about additional Vectron products. For more information and the technical data for Vectron products please see the website at [www.vectron-systems.com](http://www.vectron-systems.com).

For questions concerning our products please contact your Vectron dealer.

### 16.1. Stationary Vectron POS systems

Stationary Vectron POS systems with fast and reliable hardware are perfectly suited to single station use. Their special server attribute also allows data exchange with other stationary and mobile Vectron POS systems.

The large product range provides the ideal Vectron POS system for any application.

## 16.1.1. Vectron POS Touch 15, POS Touch 15 PCT, POS Touch 15 II PCT

Vectron POS Touch 15 has a 381 mm display (15"). Data is entered via touch screen.



Fig. 33: Vectron POS Touch 15

## 16.1.2. Vectron POS Touch 12, POS Touch 12 PCT, POS Touch 12 II PCT

Vectron POS Touch 12 has a 307 mm display (12,1"). Data is entered via touch screen.



Fig. 34: Vectron POS Touch 12

## 16.1.3. Vectron POS Mini II

Vectron POS Mini II POS Mini II has a 178 mm display (7"). Data is entered either via the flat keyboard or via touch screen (when using the software light licence, data input is made exclusively via keyboard).



Fig. 35: Vectron POS Mini II

## 16.2. Mobile Vectron POS systems

### 16.2.1. Vectron POS MobilePro III

The Vectron POS MobilePro is a robust and completely water-tight mobile POS system that is suitable for indoor- and outdoor use. The high-quality TFT-LCD with glass surface and background lighting and provides good legibility in daylight and artificial light.

Thanks to the practical combination of capacitive touch and keyboard it is fast to operate and is therefore particularly recommended for companies with high customer frequency or at peak times. The POS system is lightweight and ergonomically shaped to make the work more convenient.



Fig. 36: Vectron POS MobilePro III

## 16.3. Software

### 16.3.1. Vectron Mobile App

The new ECR app for hospitality professionals is so easy to operate that you will be familiar with all the functions within minutes. At the same time the app provides you all the comfort you require for mobile cashing.



Abb. 4: Vectron Mobile App

### 16.3.2. Vectron Commander

The Commander is the communication- and evaluation software for Vectron POS systems. You can use the software on computers with operating system Microsoft® Windows®.

With the Vectron Commander you can retrieve, evaluate and manage the data of the Vectron POS systems. The software helps you get an overview on sales, order, and the working times of your staff.

Data can be sent to and received from several POS systems simultaneously.

Vectron Commander has an integrated user rights administration that allows you assigning individual rights for every user.

The POS Anywhere function enables you to connect via network or modem to POS systems and control them remotely and to monitor operating procedures.

The Commander can be used as interface between external like e.g. ERP systems and POS systems.

### 16.3.3. Vectron Journal Tool

Vectron Journal Tool is a tool for evaluation, archiving and analysis for the POS system's journal data that was read by means of the Vectron Commander.

Companies of all trades profit from the comprehensive functions. All sales and transactions are displayed in detail. The respective transactions for each receipt (e.g. subtotal, split receipt, invoice) are displayed.

The software can be installed on common PCs by using a Microsoft SQL database.

### 16.3.4. Vectron POS PC

POS PC is software that you can use on computers with operating system Microsoft® Windows®.

You can use the software in addition to the usual Windows applications like e-mail-, office- and ERP applications.

The POS PC software is compatible to all mobile and stationary POS systems, Vectron Commander and Vectron Journal Tool.

## 16.4. bonVito

bonVito is Vectron's solution for customer loyalty. All customer retention promotions are conveniently processed automatically via the Vectron POS system during the payment process. bonVito provides individual customer cards, collection and redemption of points, digital stamps, payment function and coupons per e-mail, text message or receipt imprint.